Ride Designs®
a branch of Aspen Seating, LLC

8100 SouthPark Way, C400
Littleton, Colorado 80120 USA

toll-free: 866.781.1633
phone: 303.781.1633
www.ridedesigns.com

Ride® Custom Back interface to Quickie Sedeo Pro Seating System (RCB2-QSIB)

Installation Instructions

The RCB2-QSIB comes with the following components:

a. 1 ea) Quickie Sedeo Pro bracket
b. 2 ea) receiver blocks
c. 8 ea) screws
d. 4 ea) M6 washers
e. 4 ea) M6 locknuts

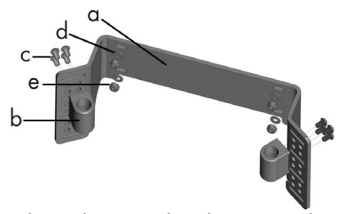

1. Remove any backrest support and mounting brackets down to back pan and mounting studs. Existing lock nuts can be used in step 2. Lock nuts are provided with the Quickie Sedeo Pro Interface Bracket in case they are missing on the back pan.

2. Place Quickie Sedeo Pro Interface Bracket (a.) against Quickie Sedeo Pro back plate. Loosely install 4 ea M6 washers (d.) and 4 ea M6 locknuts (e.) Do not tighten locknuts until step 4.

3. Confirm receiver blocks (b.) are in the desired vertical position for optimal fitment of the user. Adjust receiver block height by removing 4 screws (c) and placing receiver block in desired vertical position.

4. Once receiver blocks have been installed in the desired position, ensure 4 receiver block screws are tightened, and tighten the 4 ea. M6 washers and M6 locknuts to secure the Sedeo Pro bracket in place.

5. Loosen depth and width adjustment screws on Ride Custom Back FlexLoc hardware. Hold Ride Custom Back up to installed Quickie Sedeo Pro Interface Bracket and loosely position the Ride Custom Back and FlexLoc hardware as desired.

6. Insert the arm pins on the Ride Custom Back FlexLoc hardware into the receiver blocks on the Quickie Sedeo Pro Interface Bracket.

7. Adjust the FlexLoc hardware arms to achieve desired depth and lateral position. Tighten FlexLoc hardware depth adjustment screws. **Note: Take care to ensure angular adjustment teeth mesh together properly.**

8. Tighten FlexLoc hardware width adjustment set screws.

9. Make any final adjustments and tighten all hardware
   A. Back angle adjustments: Loosen 4 screws "A"
   B. Height adjustments: Loosen 3 screws "B"
   C. Height range adjustments: Remove M6 nuts & washers (See step 2). Remove 4 x screws from receiver block, reposition and reinstall (See step 3).
   D. Rotational adjustments: Loosen 4 bolts (D), rotate back, re-tighten.

Note: It may be necessary to remove and reinstall the Ride Custom Back multiple times as adjustments are made and screws are tightened.

⚠ WARNING: Refer to and heed all warnings and cautions within your Ride Designs Custom Back and Ride Designs Custom Cushion owner's handbook. Visit www.ridedesigns.com for the latest information.

1.

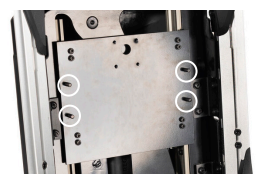

2.

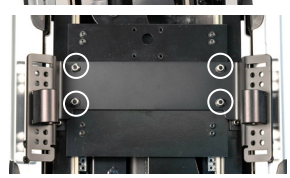

3.

4.

5.

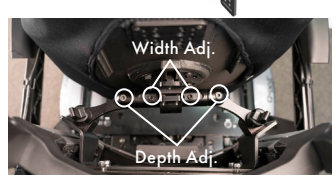

6.

7.

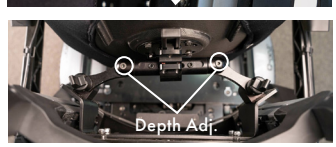

8.

9.

© 2024, Ride Designs. 090-233-B
Patents: www.ridedesigns.com/patents